



Dual Alarm AM/FM Clock Radio

OWNER'S MANUAL — Please read before using this equipment.

CONNECTING AC POWER

Plug the clock radio's power cord into a standard AC outlet. The display lights.

Caution: The clock radio's AC power cord is equipped with a polarized plug to prevent electric shock. One blade on the cord's plug is wider than the other and the plug only fits an outlet one way. If you can not easily insert the plug, turn it over and try again. Do not force it.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.		
	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.


INSTALLING A BACK-UP BATTERY

If AC power fails, the clock radio's Battery Sentinel back-up power system continues to operate the clock for up to 8 hours with the display turned off to conserve power. This lets the alarm sound for at least 10 minutes at the preset time, even if AC power fails.

Your clock radio requires a 9-volt battery (not supplied) for back-up power. For the best performance and longest life, we recommend a RadioShack alkaline battery.

Caution: Use only a fresh battery of the required size and recommended type.

1. Press the battery compartment cover's tab, then lift off the cover.
2. Snap the battery onto the connector and place it in the compartment.
3. Replace the cover.

When the BATTERY SENTINEL icon  appears, replace the battery.

 
Warning: Dispose of old batteries promptly and properly. Do not bury or burn them.

Caution: Always remove an old or weak battery. Battery can leak chemicals that can destroy electronic parts.

Interval Timer — lets you set a timer for up to 2 hours; ideal for naps. See “Using the Interval Timer.”

SLEEP — lets you set the radio so it plays as you fall asleep, then automatically turns off. See “Using Sleep” on Page 3.

Backlit Display — lets you see the time in a dark room.

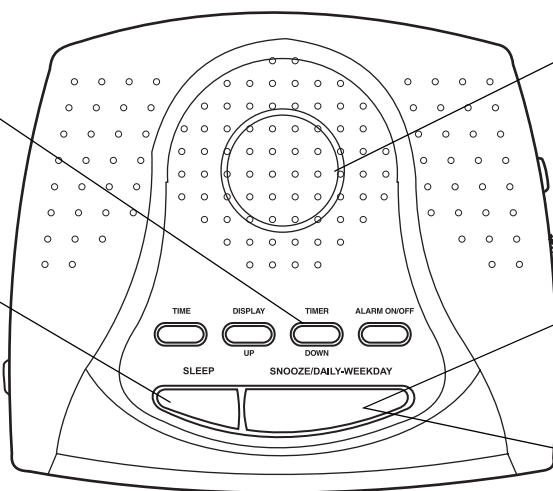

3-Inch Speaker — provides excellent radio fidelity.

SNOOZE — press to silence the alarm for about 9 minutes. You can press **SNOOZE/DAILY-WEEKDAY** repeatedly for an hour after the alarm time. To silence the alarm until the set alarm time the next day, press **ALARM ON/OFF**.

DAILY-WEEKDAY — lets you set a daily alarm for every day or weekdays only. See “Using the Alarms.”

SETTING THE TIME

1. Press **TIME**. The current time and day of the week flash.
2. Repeatedly press **DISPLAY/UP** or **TIMER/DOWN** to change the time by 1-minute increments. Or, hold down **DISPLAY/UP** or **TIMER/DOWN** to change the time by 10-minute increments. **PM** appears to indicate a PM time.
3. Repeatedly press **SNOOZE/DAILY-WEEKDAY** to select the day of week.
4. Press **TIME** to confirm the settings.
5. To store the alarm setting, press **ALARM ON/OFF** or wait 15 seconds until the normal time display appears. At the preset time, the alarm beeps or the radio turns on.

Note: If you do not press a button for 15 seconds, the clock stores the settings and the normal time display returns.

USING THE ALARMS

1. Repeatedly press **ALARM ON/OFF** until **AL1** or **AL2** appears, while the current alarm time and the day of the week flash.
2. Repeatedly press **SNOOZE/DAILY-WEEKDAY** to have the alarm work either daily (Monday to Sunday) or from Monday to Friday. Either **Su Mo Tu We Th Fr Sa** or **Mo**

Tu We Th Fr appears to confirm your selection.

3. Press or hold down **DISPLAY/UP** or **TIMER/DOWN** to change the alarm time setting.
4. Repeatedly press **SLEEP** until the bell icon for a beeping alarm (🔔 or 🔔) or musical note icon for a radio alarm (🎵 or 🎵) appears.

USING THE INTERVAL TIMER

1. Press **TIMER/DOWN**. The preset timer and timer icon ⌚ appear.
2. Press or hold down **DISPLAY/UP** or **TIMER/DOWN** to change the timer duration. If you do not press any button for 2 seconds, the timer stores the setting and starts counting.

3. Press **DISPLAY/UP** to show the current time for 15 seconds, then return to the timer display.
4. Press **TIMER/DOWN** to cancel the timer. The timer icon disappears.
5. At the set time, the clock radio rings and the timer icon flashes. To turn off the ring, press **TIMER/DOWN**. The timer icon disappears.

Note: You cannot use the interval timer and the sleep function at the same time.

USING SLEEP

1. Press **SLEEP**. The preset sleep time and the sleep icon appear, and the radio turns on.
2. To set the sleep timer for less than 1 hour, press or hold down **TIMER/DOWN**. To set the sleep timer for up to 1 hour and 59 minutes, press or hold down **DISPLAY/UP**.

Note:

 
- If you do not press **DISPLAY/UP** or **TIMER/DOWN** within 2 seconds, the sleep timer is set to 1 hour.
 - If the clock reaches a preset alarm time while the sleep timer is counting down, the sleep timer is canceled.
3. Press **SLEEP** to show the remaining sleep time and change the sleep timer.
 4. To cancel the sleep timer, press **SNOOZE/DAILY-WEEKDAY**.

RESETTING THE CLOCK

If your clock locks up or does not work properly, disconnect the AC power cord and remove the back-up battery. Then reconnect the clock radio to AC power and reinstall the battery. If you still have problems, take the clock radio to your local RadioShack store for assistance.


USING THE RADIO

1. Press **RADIO ON/OFF** to turn on the radio.

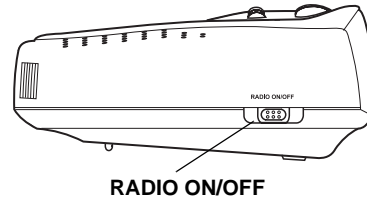

2. Slide **AM/FM** to select the desired band.
3. Fully extend the AC power cord, which serves as the FM antenna.

 Note: The AM antenna is built-in. To improve the AM reception, rotate the clock radio.

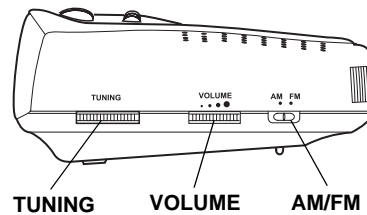

4. Rotate **TUNING** to select the desired station.
5. Rotate **VOLUME** to the desired listening level.
6. When you finish, press **RADIO ON/OFF** to turn off the radio.

THE FCC WANTS YOU TO KNOW

Your clock radio might cause TV or radio interference even when it is operating properly. To determine whether your clock radio is causing the interference, turn off your clock radio. If the interference goes away, your clock radio is causing it. Try to eliminate the interference by:

- moving your clock radio away from the receiver
- connecting your clock radio to an outlet that is on a different electrical circuit from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your clock radio.

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CARE

Keep the clock radio dry; if it gets wet, wipe it dry immediately. Use and store the clock radio only in normal temperature environments. Handle the clock radio carefully; do not drop it. Keep the clock radio away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the clock radio's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your clock radio is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Bands	AM 530–1710 kHz FM 88–108 MHz
Power Output	350 mW
Speaker	3 Inches (7.6 cm)
Power Requirement	120 V AC, 60 Hz, 50 mA DC 9V (Backup Battery)
Dimensions	2 ¹¹ / ₁₆ × 7 ¹ / ₄ × 6 ³ / ₈ inches (68.2 × 184 × 162 mm)
Weight	26.46 oz (750g)

Specification are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99